



File 4.056d1
 Horton Series 4100
 Surface Applied Operator Package

GENERAL NOTES

1. Side Load or Bottom Load Header may be used with either wall condition shown.
2. Inswing or Outswing Arm may be used with either Header shown.
3. Doors are handed as viewed from the exterior with the operator on interior.