


SARGENT® INSTALLATION INSTRUCTIONS FOR 12-980, HC980 AND 12-HC980 MULLIONS

FOR ASSISTANCE CONTACT SARGENT AT 800-727-5477 or www.sargentlock.com

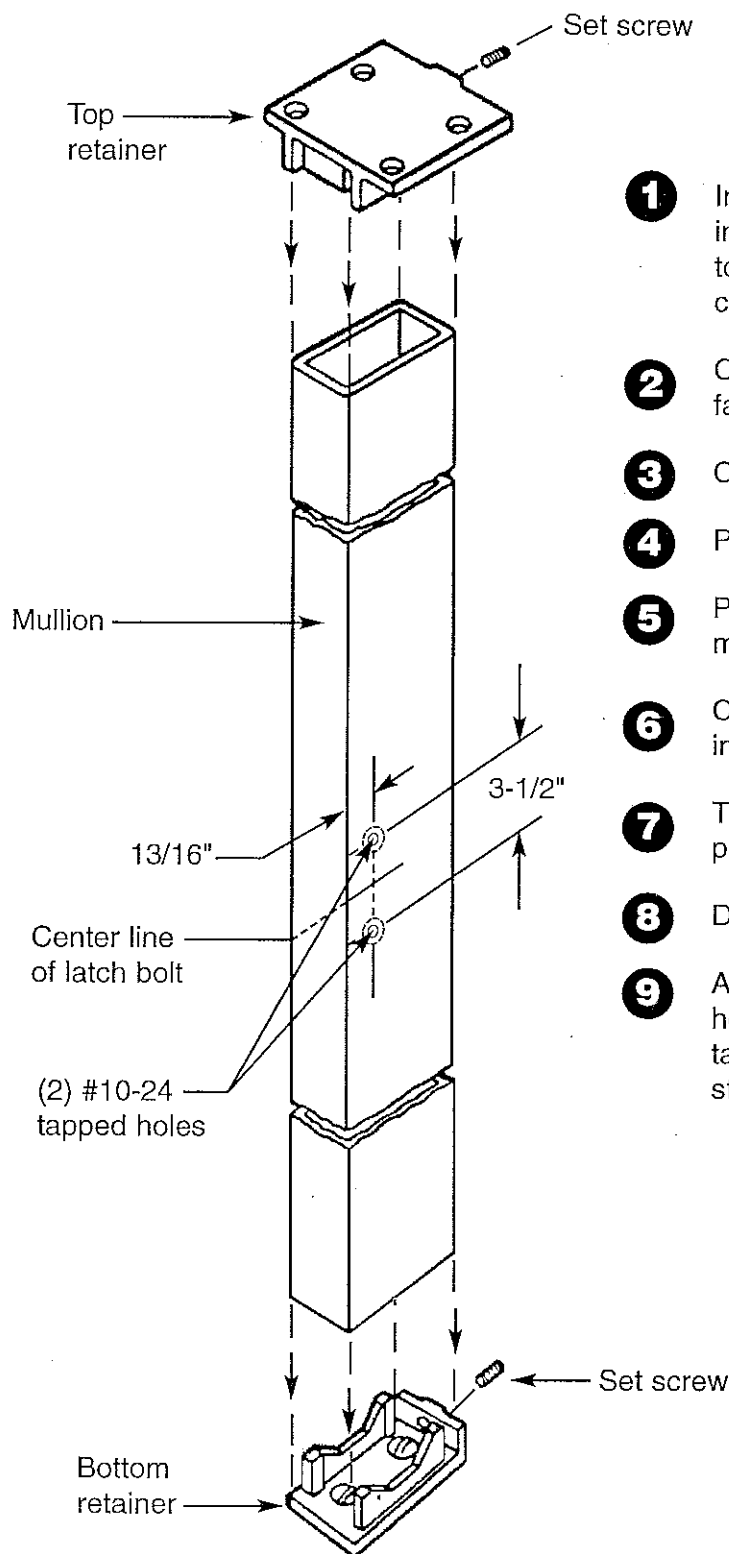

- 1** Install exit devices according to instructions included with devices before installing mullion to assure correct positioning between center cases.
- 2** Center bottom retainer between doors and fasten in place with screws provided.
- 3** Cut off top of mullion to desired length.
- 4** Place mullion into bottom retainer.
- 5** Place top retainer into top of mullion and slide mullion into position.
- 6** Center top retainer between doors and fasten in place with screws provided.
- 7** Tighten set screws on back of retainers to prevent rattle.
- 8** Drill and tap mullion for strikes.
- 9** Attach strike with 2 screws through slotted holes and adjust for proper position. Drill and tap remaining 2 holes in mullion and fasten strike in place.

