

# INSTALLATION INSTRUCTION FOR MULLION


**2**

## SECURE TOP RETAINER TO SURFACE OF TOP STOP


With four No. 14 x 1" flat hd. wood screws

or

With four  $\frac{1}{4}$ "-20 x  $\frac{5}{8}$ " flat hd. mach. screws

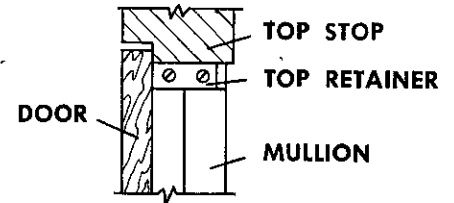

FOR NARROW TRANSOM BARS  
— USE ADAPTOR

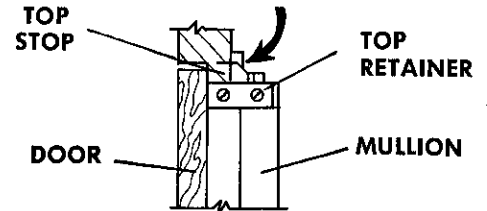

TOP RETAINER CLAMP

MULLION


**3**

## PLACE MULLION IN BOTTOM RETAINER

Cut Top Of Mullion For Correct Fit If Required  
Secure Mullion In Place By Tightening Set  
Screws In Bottom Retainer And By Screwing  
Top Retainer Clamp In Place

Drill and tap for Strike.  
Apply Strike.

## SECURE BOTTOM RETAINER TO SURFACE OF FINISHED FLOOR.

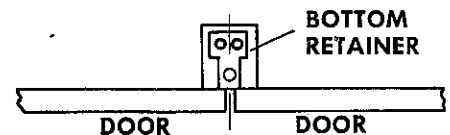

SET SCREWS

ROUND HD. SCREWS

BOTTOM RETAINER

INSIDE EDGE  
OF DOOR

BOTTOM RETAINER

THRESHOLD